Fisher-Price®

L4889

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" batteries (included).

Adult assembly is required.

Tool required for assembly:
Phillips screwdriver
(not included).

Laugh & Learn™

www.fisher-price.co.uk

Parts

Seat Bottom

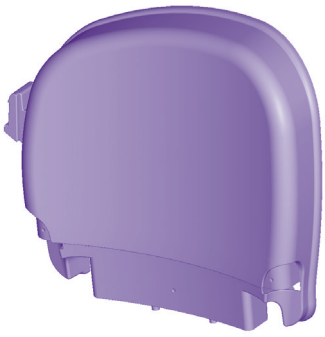

Seat Back

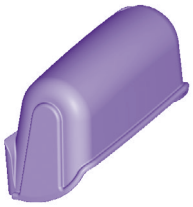

Armrest

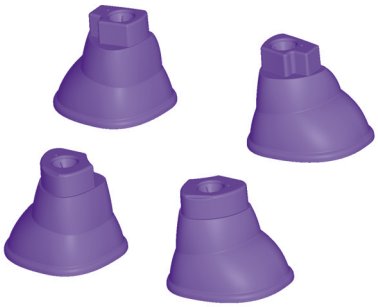

4 Legs

Table Base

Table Top

3 mm x 18 mm Screw - 2
Shown Actual Size

Note: Tighten or loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.

Assembly

⚠ CAUTION

This product contains small parts.
For assembly by an adult. Take extra care during unpacking and assembly.

1

IMPORTANT! You must assemble the armrest to the seat bottom (step 1) BEFORE assembling the seat back (step 2).

- "**Snap**" the armrest onto the seat bottom.

2

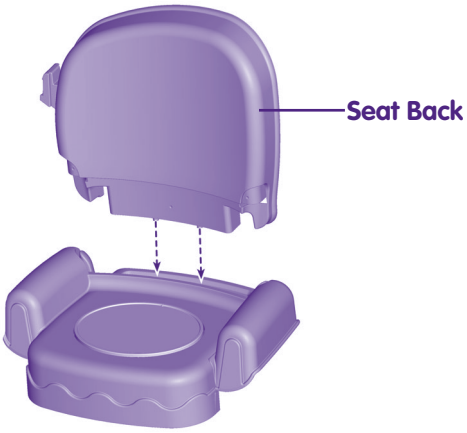

- "**Snap**" the seat back into the seat bottom.

3

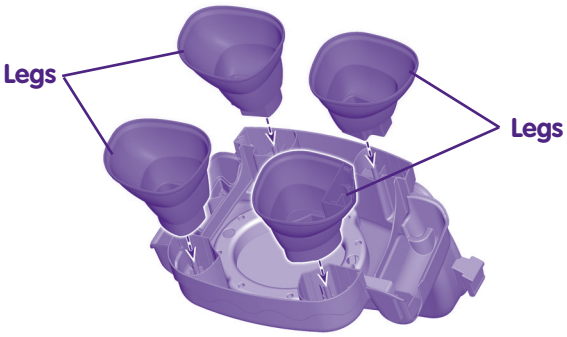

- "**Snap**" the four legs into the underside of the seat bottom.

Note: *Each leg fits in only one location.*

4

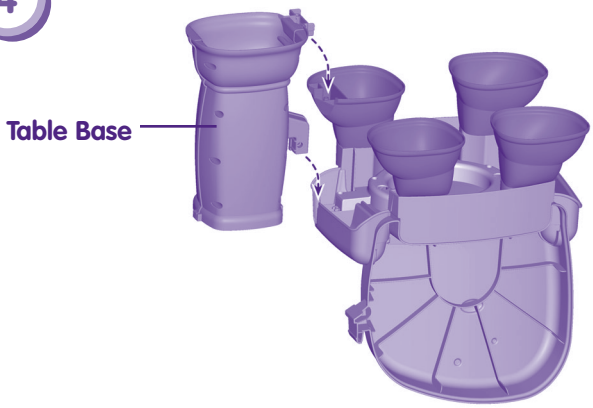

- Fit the table base onto the chair assembly, as shown.

5

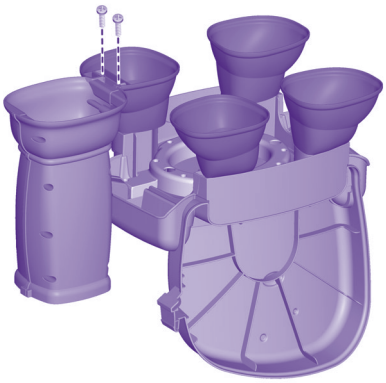

- Insert two screws through the table base and into the leg. Tighten the screws.

6

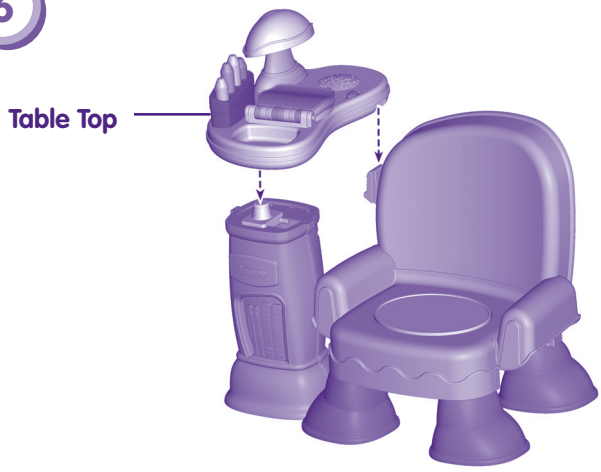

- Turn the assembly upright.
- Press down firmly to "snap" the table top onto the table base.

Note: *This may require some force.*

Battery Replacement

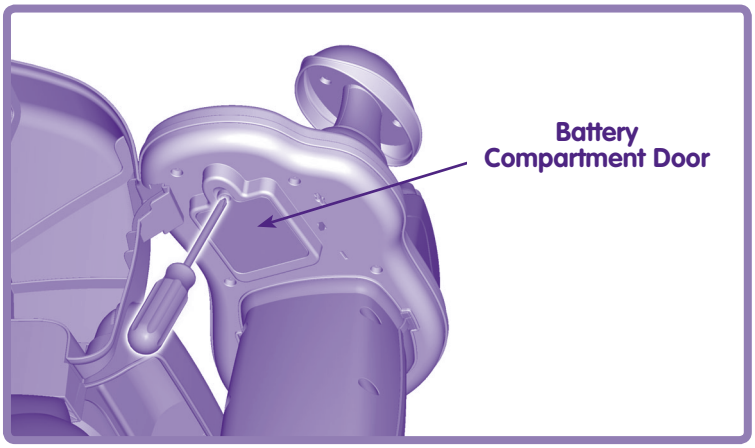

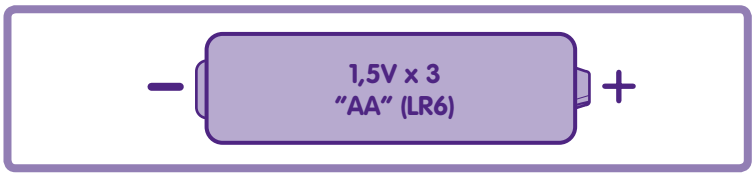

For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "AA" (LR6) batteries.

- Locate the battery compartment on the underside of the table top.
- Loosen the screw in the battery compartment door. Remove the battery compartment door. Remove the batteries and throw them away.
- Insert three "AA" (LR6) alkaline batteries, as indicated inside the battery compartment.

Hint: *We recommend using* ***alkaline*** *batteries for longer battery life.*

- Replace the battery compartment door and tighten the screw.
- When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries!

- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Three Fun Play Modes!

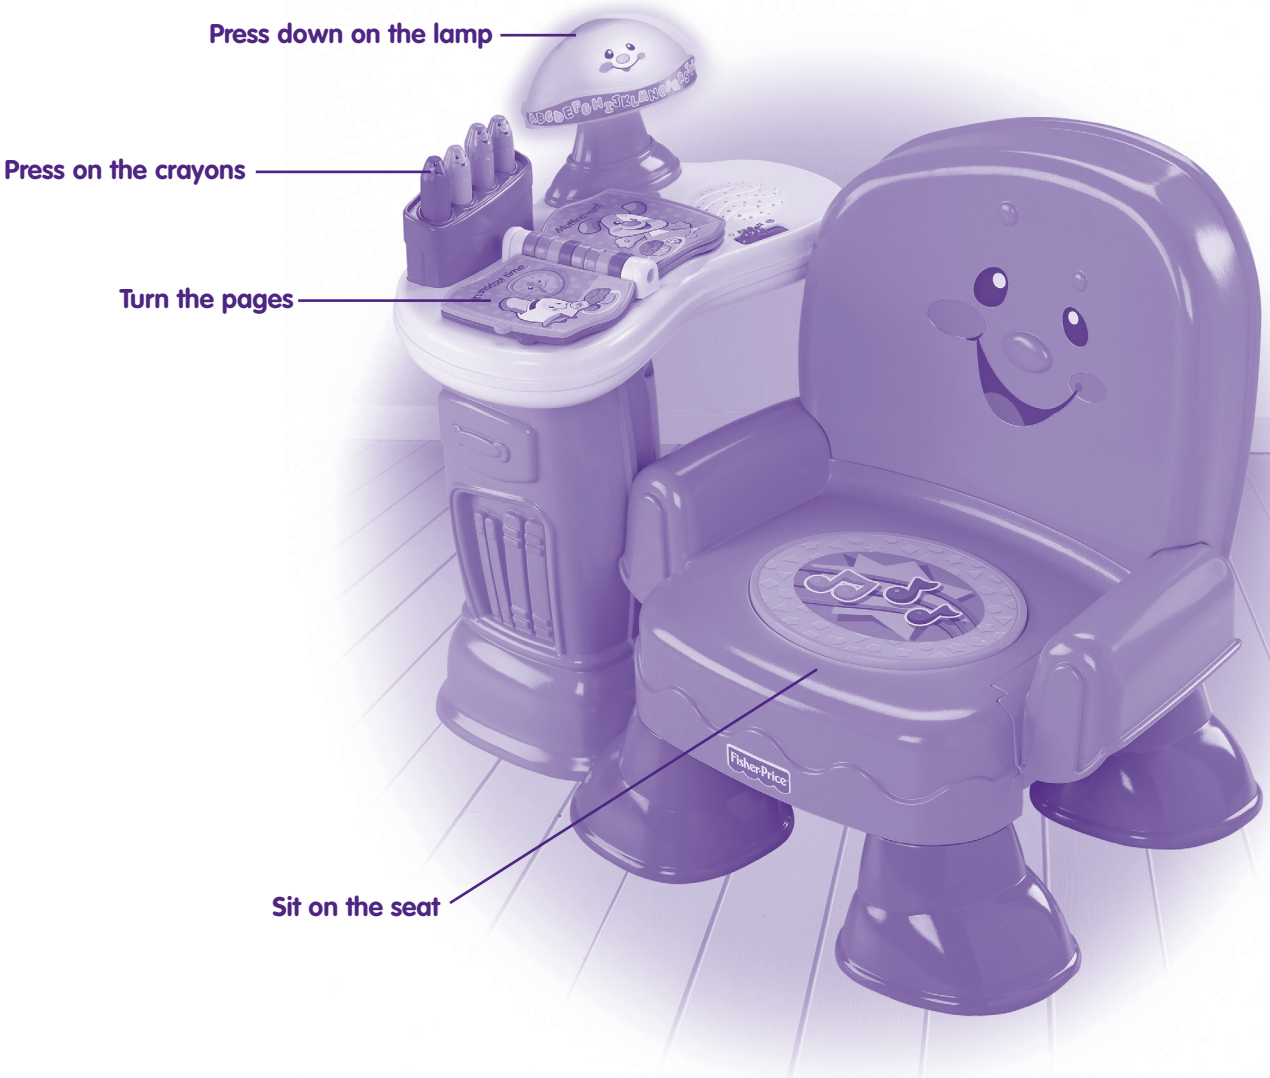

Mode Switch

- Locate the mode switch on the armrest.
- Slide the mode switch to either learning mode **ABC**, music mode or imagination .
- When your child is finished playing with this toy, slide the mode switch off **O**.

Volume Switch

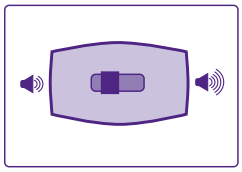

- Locate the volume switch on the underside of the table top.
- Adjust the volume to high or low , for your child's comfort.

ABC Learning Mode

- Turn the book pages to hear the story.
- Press on the crayons or lamp to learn about colours, letters, shapes and counting. Press again to hear a song or fun phrase.
- Sit on the seat to hear fun phrases or a fun tune. Stand up and the music stops. Sit down to resume.

Music Mode

- Turn the book pages to hear a tune.
- Press on the crayons or lamp for more music.
- Sit on the seat for fun phrases and music.

Imagination

- Turn the pages to hear sound effects from the book.
- Press on the crayons to hear tones.
- Press on the lamp to hear a musical ditty or hear lamp "on/off" sound effects.
- Sit on the seat or stand up for sound effects.

Consumer Information

Great Britain: Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk.
Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.
New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.
Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.
Malaysia: Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.

Learn every day - through fun, familiar play!

Make learning more fun with the whole collection of **Laugh & Learn™** toys. With rich music, lyrics and lots of activities, they combine early academics and everyday experiences, for the way kids really learn.

Each sold separately and subject to availability.

H0681

K9769

K9782

H0675

G2810

G2808

K9734

H8169

K9733

H8589

J4839

H8179

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A.
©2007 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

L4889pr-0726
PRINTED IN CHINA